

ZONEMATE[®] SENSOR

WIRELESS

QUICK INSTALL GUIDE

HOW TO PAIR THE SENSOR TO YOUR SYSTEM

Adding a sensor during initial setup using the setup wizard

- 1 Follow the step-by-step instructions in the Milieu Climate setup wizard. At step 5, **Sensors**, ensure you select ✓.

2 Remove the battery isolator from the wireless sensor and wait for the LED to be flashing green.

3 Select the sensor number that you would like to pair, and follow the steps shown on the screen.

4 Press the sensor button — the LED light will flash blue indicating that it is trying to pair.

5 The LED light will turn solid blue for 2 seconds indicating that it is paired.

Adding a sensor after initial setup using the settings

- 1** Go to the menu screen and select **Settings** → select **Aircon Settings** → select **Zone Setup** → select **Sensor Pairing**.
- 2** Select the sensor number that you would like to pair.
- 3** Each sensor number corresponds to the same zone number.

Assigning a sensor to a different zone or to multiple zones

1 Go to the menu screen and select **Settings** →
select **Aircon Settings** →
select **Zone Setup** →
select **Sensor Assignment**.

2 Select the zone that you would like to assign a sensor to.

3 Select the sensor number you would like to assign to the zone.

WIRELESS SENSOR FUNCTIONS

ZONE SWITCH

You can use the ZoneMate Wireless Sensor to manually turn your zone on or off by pressing the button on the bottom left of the sensor.

LED INDICATION



ZONE ON




ZONE OFF

Flashing light during power up

 **ZONEMATE THREAD NETWORK NOT DETECTED**

 **ZONEMATE THREAD NETWORK DETECTED**

Flashing light during pairing

 **SENSOR IS SEARCHING FOR A ZONEMATE MODULE TO PAIR WITH**

NOTE: If no LED light is showing, press the sensor button. If no light is visible after pressing the button, check the battery.

ADVANCED ZONE CONTROL

For advanced zone control go to the Milieu Climate hub.

From the settings menu you can name each zone and set the default damper position for each zone.

To optimise your comfort we recommend scheduling events for your zones.

REPLACING THE BATTERY

- 1** Remove the ZoneMate Wireless Sensor cover.
- 2** Insert a small flathead screw driver into the cut out provided in the battery cover and pop out the cover.
- 3** With a small flathead screw driver push the battery inwards until the lever ejects the battery.
- 4** Insert a new **3V CR2032 battery**.

UNPAIRING SENSOR

1 Press and hold the sensor button for 10 seconds until you see a blue light flashing followed by a solid red. Can take up to 30 seconds before it is displayed on the Hub.

2 Alternativley, go to Milieu Climate Hub menu screen and select **Settings** →
select **Aircon Settings** →
select **Zone Setup** →
select **Sensor Pairing** →
select **Sensor Number** →
select **Unpair Sensor**.

TROUBLESHOOTING TIPS

Wireless Sensor is flashing a blue light and not pairing.

- Repeat the pairing process from the Milieu Climate Hub.

NOTE: Pairing mode will timeout in 60 seconds if it doesn't pair with a Wireless Sensor.

Experiencing problems?

- Reboot the Hub by pressing the button for 10 seconds and wait for 3 minutes before continuing.

ZONEMATE[®] **by Milieu Climate[®]**

INDUSTRY LEADING SUPPORT MOMENTS AWAY AT...

+61 2 9659 7438

support@milieulabs.com.au

milieulabs.com.au/support